


## SHELVING: LAMINATE SHELF

Item Numbers 8417-8439, 8449-8461

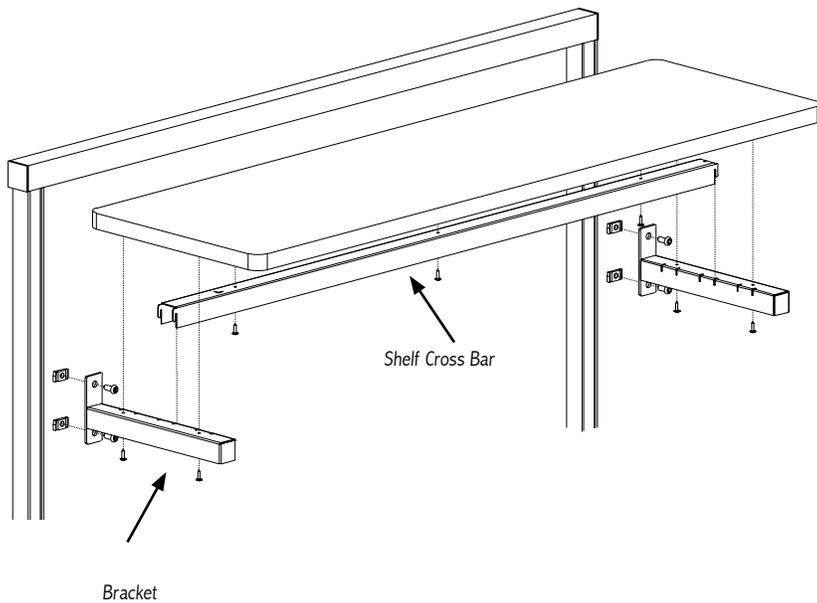


## ACCESSORIES

PARTS AND HARDWARE	QUANTITY
Laminate Shelf	1
Brackets	2
Cross Bar	1
Basic Bolts	4
Basic Nuts	4
Wood Screws	8
Allen Wrench	1
<b>Other Items Needed (not included)</b>	
Phillips head screwdriver or drill	
Tape Measure	
Level	

1. Insert Basic Bolt into holes on bracket. Secure with a Basic Nut turning one revolution.
2. Insert Nuts into Frame or Upright and tighten bolts. Notches on brackets face inward. Repeat for other bracket. Measure or use a level to ensure brackets are at the same height.
3. Insert the shelf cross bar into frontmost position (recommended).
4. Place shelf on top of bracket installation and secure with wood screws underneath the shelf.


## STORAGE CABINET

Item Numbers 8551-8553

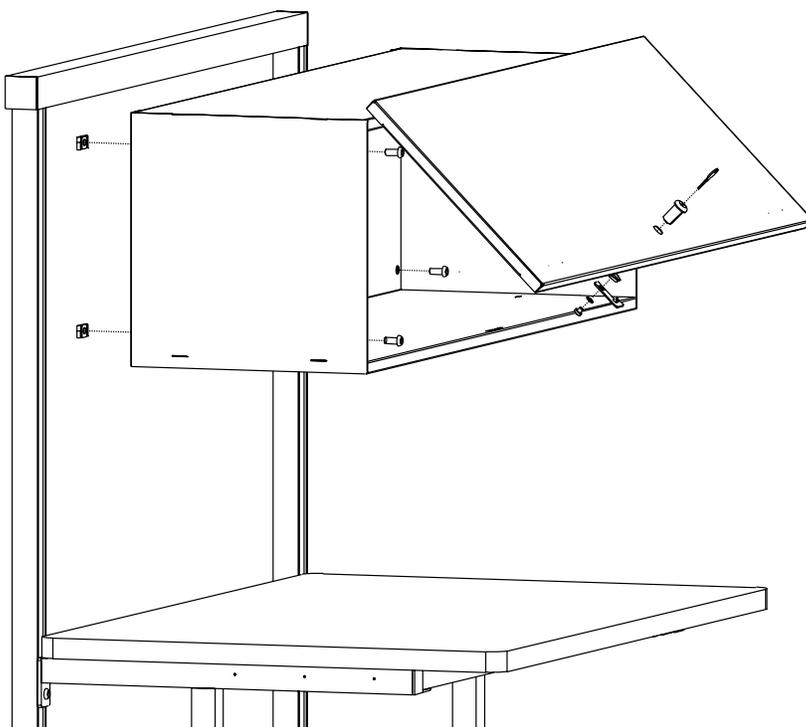


PARTS AND HARDWARE	QUANTITY
Storage Cabinet	1
Lock mechanism	1
Basic Bolts	4
Basic Nuts	4
Allen Wrench	1

1. Open Storage Cabinet and slide door back.
2. Insert Basic Bolts into the holes on the inside corners of the Cabinet. Secure with a Basic Nuts and turn one revolution.
3. Position Storage Cabinet on frame and turn bolts 90 clockwise to grip channel. Tighten bolts.
4. To install the lock, push the lock mechanism through the hole in front right side of the drawer. Assemble as shown. Ensure the unthreaded part of the lock and the key teeth face upwards.

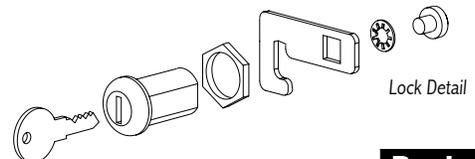

## SHELVING: LAMINATE CORNER

Item Numbers 8485, 8486, 8488, 8489

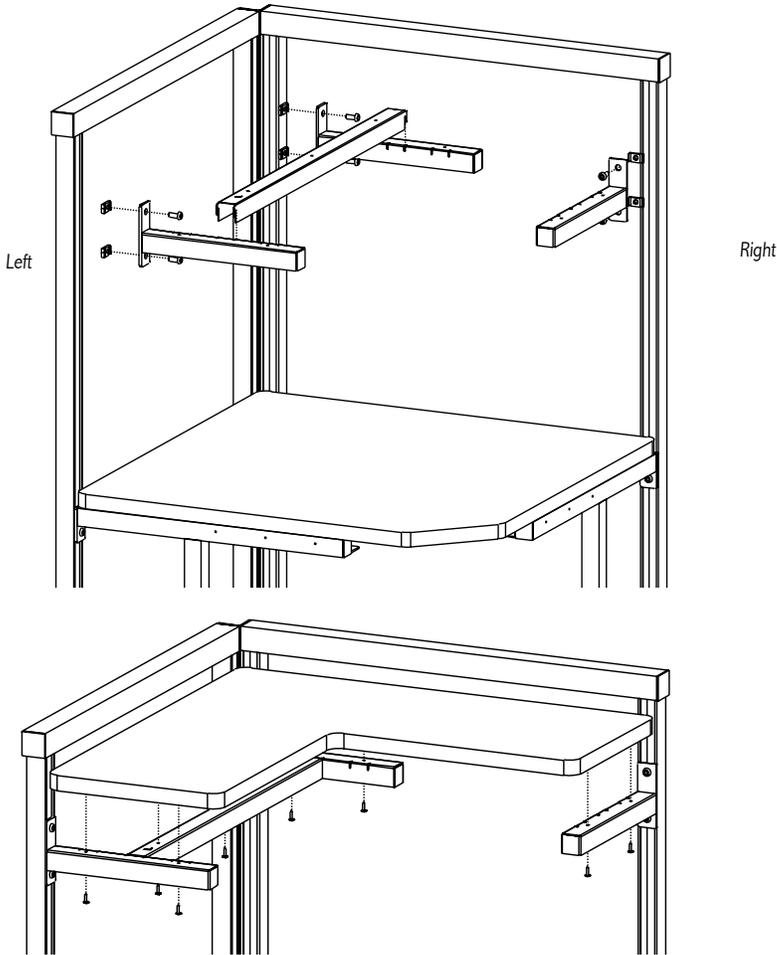

PARTS AND HARDWARE	QUANTITY
Laminate Shelf	1
Brackets	3
Shelf Cross Bar	1
Basic Bolts	6
Basic Nuts	6
Wood Screws	10
Allen Wrench	1
<b>Other Items Needed (not included)</b>	
Phillips head screwdriver or drill	
Tape Measure	
Level	


1. Insert Basic Bolts into holes on all three brackets. Secure with a Basic Nut turning one revolution.
2. On the left side of the Corner Station, install bracket on Frame or Upright and tighten bolts. Notches on bracket face inward. Repeat for other bracket. Measure or use a level to ensure brackets are at the same height.
3. Insert the shelf cross bar into frontmost position on the brackets (recommended).
4. On the right side of the Corner Station, install the third bracket. Measure or use a level to ensure all three brackets are at the same height.
5. Place shelf on top of bracket installation and secure with wood screws through the brackets and into the shelf.

PARTS AND HARDWARE	QUANTITY
Laminate Shelf	1
Brackets	2
Shelf Cross Bar	1
Basic Bolts	4
Basic Nuts	4
Wood Screws	8
Allen Wrench	1
<b>Other Items Needed (not included)</b>	
Phillips head screwdriver or drill	
Tape Measure	
Level	

1. Assemble bracket as shown.
2. Invert bracket and place on underside of shelf.
3. Align laminate flush with the bracket flange and sides.
4. Attach shelf with wood screws through the bracket and into the shelf.
5. Insert a Basic Bolt into each hole at back of shelf bracket, top and bottom. Secure with Basic Nut. Turn only one revolution.
6. Turn shelf over and insert nuts into frame underneath the worksurface.

## SHELVING: LAMINATE UNDER-SURFACE

Item Numbers 8440-8448


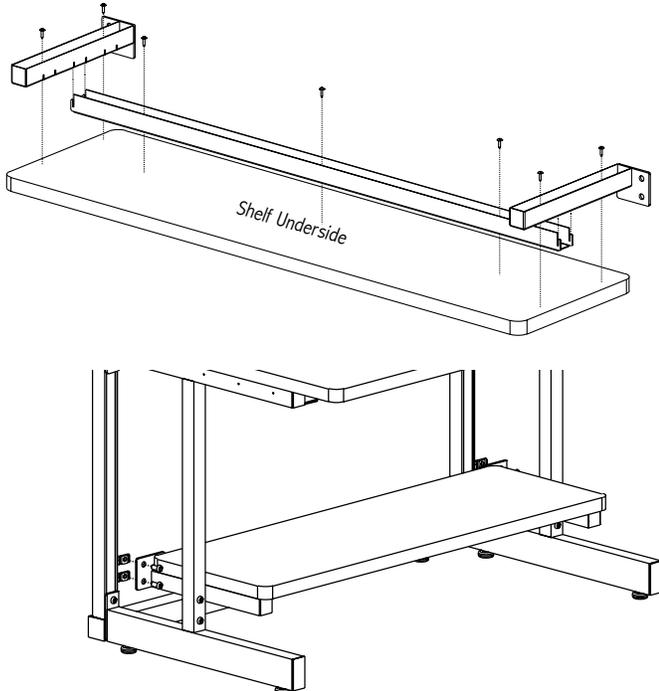


**Production  
BASICS**

Need Help? Call Assembly Support at 800.318.2770


## SHELVING: UNIVERSAL

Item Numbers 8390-8397, 8410-8416

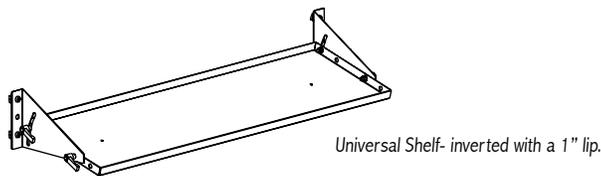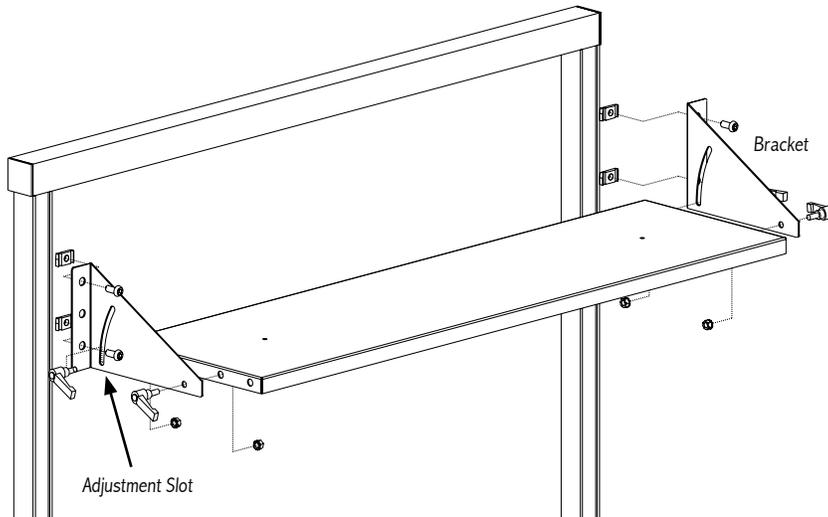

## SHELVING: WIRE

Item Numbers 8400, 8401, 8403, 8406

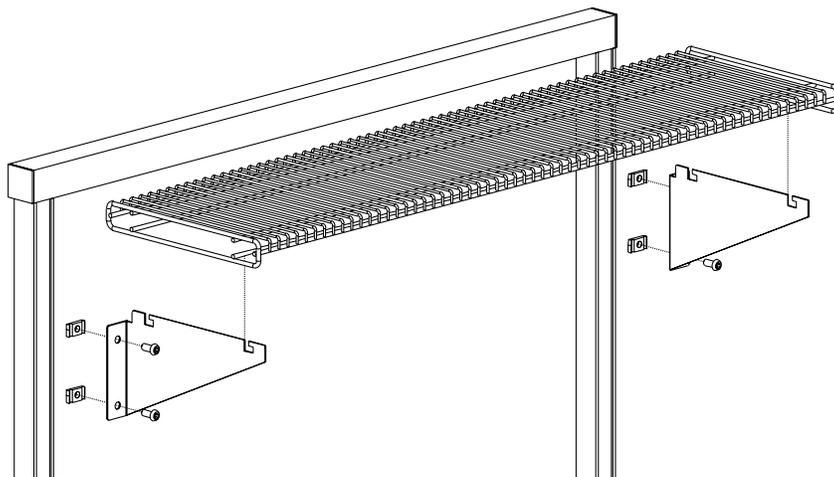

## ACCESSORIES

PARTS AND HARDWARE	QUANTITY
Laminate Shelf	1
Brackets	2
Basic Bolts	4
Basic Nuts	4
Handles	4
Kepr Nuts	4
Allen Wrench	1
<b>Other Items Needed (not included)</b>	
Phillips head screwdriver or drill	
Tape Measure	
Level	

• **Note: Universal Shelf can be installed as flat surface or sloped with a 1-inch lip.**

1. Insert Basic Bolt into holes on shelf bracket. Secure with Basic Nut and turn only one revolution. Repeat for other side of bracket.
2. Position brackets as shown. Insert Basic Nuts attached to shelf bracket tabs into frame channel. Turn Basic Bolt 90 degrees clockwise to grip.
3. Slide brackets to desired height. Measure or use a level to ensure brackets are at the same height.
4. Position shelf to line up with adjustment slots on bracket. Insert handle from outside into adjustment slots and secure with star washer and nut. Repeat for all four handles.

PARTS AND HARDWARE	QUANTITY
Wire Shelf	1
Brackets	2
Cross Bar	1
Basic Bolts	4
Basic Nuts	4
Allen Wrench	1
<b>Other Items Needed (not included)</b>	
Tape Measure	
Level	

1. Insert Basic Bolt into holes on shelf bracket. Secure with Basic Nut and turn only one revolution. Repeat for other bracket.
2. Position brackets as shown. Insert Basic Nuts attached to shelf bracket tabs into frame channel. Notches indicate top of bracket. Turn Basic Bolt 90 degrees clockwise to grip. Measure or use a level to ensure brackets are at the same height.
3. Attach the shelf to the bracket. Nest shelf in notches and pull forward to lock in place.