


ASSEMBLY

GROUND BOLT

For ESD Laminate Worksurfaces and Shelving

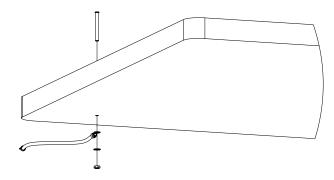

PARTS AND HARDWARE	QUANTITY
Ground Bolt	1
Ground Wire	1
Washer	2
Nut	1

- 1. Insert Ground Bolt through top of worksurface through pre-drilled hole.
- 2. Slip ground wire over bolt underneath the worksurface. Add the nut and tighten.
- 3. Ground other end of wire to electrical ground.
- 4. For additional information on grounding, contact your company's ESD manager or the ESD Association at 315.339.6937, www.esda.org.

Fax: 617.926.8010